



step 1

Mark the strut line when using a conduit support. Shallow or deep strut.

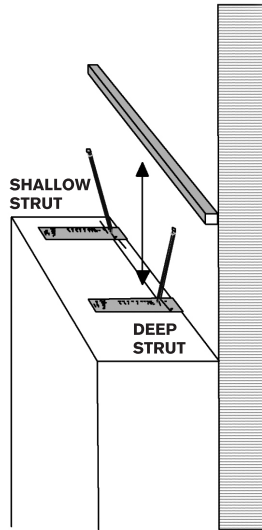


step 2

Turn the Marksman over, determine the desired conduit starting point and mark the conduit combination.

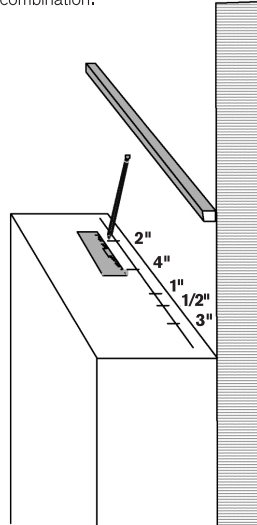


step 3

Turn the Marksman over, position intersecting marks in the alignment window and mark the center of the K.O.

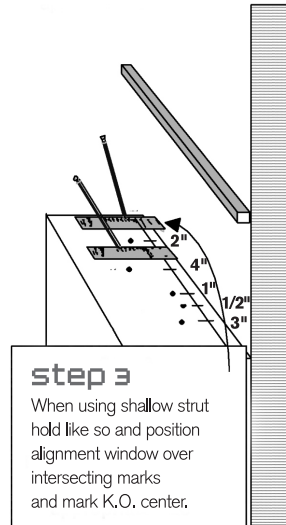

Perfect panel layout every time underground or overhead.

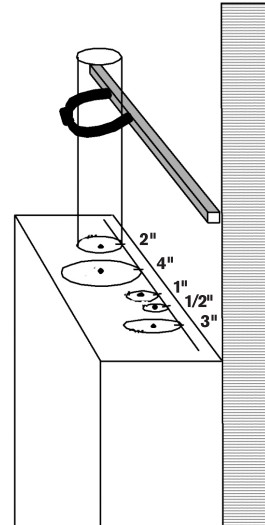

step 3

When using shallow strut hold like so and position alignment window over intersecting marks and mark K.O. center.